



FAHNENTSCHUDI



easy to change the display



1. open legs




2. pull out the telescopic rod



3. open the system and pull out the print



4. fix the telescopic rod into the system

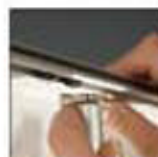

5. fix the clamping rail onto the telescopic rod

If the system does not work properly contact us by phone: 071 985 00 13
or by e-mail: support@fahnentschudi.ch